





APOLLO II

- ◆ FTF LCD display
- ◆ 12/24V voltage (4W version only)
- ◆ full alloy body for heat radiation
- ◆ Programmable keypad
- ◆ CTCSS/DCS (optional)
- ◆ Wireless microphone control (optional)
- ◆ Cell-phone APP control (optional)
- ◆ AM/FM multi norms
- ◆ Flexible menu and programming software
- ◆ DTMF
- ◆ SQ, ASQ
- ◆ SQ, ASQ open/close value setting
- ◆ RF Gain
- ◆ Scan
- ◆ Dual watch
- ◆ Programmable RB
- ◆ CH9/19
- ◆ NB
- ◆ HI-CUT
- ◆ Voltage protection
- ◆ 8 memory channel
- ◆ TOT
- ◆ Backlight control
- ◆ Automatic power on
- ◆ Keypad lock



A. Key function:

【 】 key

1. Power on radio: short press 【  】 key, the radio emit a prompt and LCD display on.
2. Power off radio: hold 【  】 key, until LCD display off.
3. fast mute: when radio is powered on, short press 【  】 key, LCD displays AUDIO:MT, the radio volume will mute.
short press 【  】 key, LCD displays AUDIO: Esc, radio will recover last volume level.

Channel switch

1. Turn channel switch anti-clockwise to move to down channel, turn it clockwise to up channel,
2. fast channel adjust: short press 【 **PUSH** 】 key to adjust channel by 10 steps each push.
3. Key lock: Hold 【 **PUSH** 】 key, LCD displays Key Lock, All keys except PTT key are locked. Hold 【 **PUSH** 】 key again to unlock the key.

Programmable keypad:

FP1. FP2. FP3. FP4. FP5. FP6 are programmable key for 18 functions in 3 groups as follow.(each key able have 3 functions at most)

MOD: AM/FM mode

- 1、 short press 【 **FUNC** 】 key to choose programmed function group.
- 2、 short press 【 **FPX** 】 key which allocated as MOD function, the LCD displays MOD:XX.
- 3、 Short press it again or turn channel switch to switch between FM→AM.
- 4、 Press 【 **PUSH** 】 key or 【 **FUNC** 】 key to store setting and exit, or wait 10s to automatically store setting and exit.

RFG: Adjust RF gain

- 1、 short press 【 **FUNC** 】 key to choose programmed function group.
- 2、 short press 【 **FPX** 】 key which allocated as RFG function, LCD displays RFG: XX.
- 3、 Short press it again or turn channel switch to adjust RF gain level.
- 4、 Press 【 **PUSH** 】 key or 【 **FUNC** 】 key to store setting and exit, or wait 10s to automatically store setting and exit.

Note: When RFG is ON, LCD will display the level accordingly.

EMG: CH9/CH19

- 1、 short press 【 **FUNC** 】 key to choose programmed function group..
- 2、 short press 【 **FPX** 】 key which allocated as EMG function, first press is choose CH9.
- 3、 Short press it again, will choose CH19.
- 4、 Short press it third time, will return to last normal channel.

VOL: Volume level control

- 1、 short press **【FUNC】** key to choose programmed function group.
- 2、 short press **【FPX】** key which allocated as VOL function, LCD displays VOL: XX.
- 3、 Turn channel switch to adjust volume level.
- 4、 Press **【PUSH】** key or **【FUNC】** key to store setting and exit, or wait 10s to automatically store setting and exit.

SQL:

Short press: Squelch level control

- 1、 short press **【FUNC】** key to choose programmed function group..
- 2、 short press **【FPX】** key which allocated as SQL function, LCD displays SQ: XX.
- 3、 Turn channel switch to adjust S level.
- 4、 Press **【PUSH】** key or **【FUNC】** key to store setting and exit, or wait 10s to automatically store setting and exit.

Long press: ASQ level control

- 1、 short press **【FUNC】** key to choose programmed function group.
- 2、 Long press **【FPX】** key which allocated as ASQ function, LCD displays ASQ: XX.
- 3、 Turn channel switch to adjust ASQ level.
- 4、 Press **【PUSH】** key or **【FUNC】** key to store setting and exit, or wait 10s to automatically store setting and exit.
- 5、 Long press **【FPX】** key again to turn on SQL function.

DSP: Channel/Frequency display mode.

- 1、 short press **【FUNC】** key to choose programmed function group.
- 2、 short press **【FPX】** key which allocated as DSP function, LCD displays DSP:XX.
- 3、 Short press it again or turn channel switch to switch between CH→FRQ.
- 4、 Press **【PUSH】** key or **【FUNC】** key to store setting and exit, or wait 10s to automatically store setting and exit.

SCA:

Short press: Turn on scan function

- 1、 short press **【FUNC】** key to choose programmed function group..
- 2、 short press **【FPX】** key which allocated as SCA function, LCD displays “**S**” .
- 3、 During scanning, turn channel switch to change scan direction.
- 4、 Press **【PUSH】** key or **【FUNC】** key exit scan.

Long press: add/delete scan list

In channel mode, Long press **【FPX】** key which allocated as SCA function to add or delete channel from scan list.

1. When the LCD displays “**S**” means current channel is in scan list.
2. When the “**S**” disappear, means current channel is deleted from scan list.

Note: this function is same as the channel menu 2 control.

MEM:

Short press: use memory channel

- 1、 short press **【FUNC】** key to choose programmed function group.
- 2、 short press **【FPX】** key which allocated as MEM function to enter memory channel, turn channel switch to choose memory channels.
- 3、 Short press it again to store setting and exit.

Long press: Memory channel store position

- 1、 Choose a channel
- 2、 short press **【FUNC】** key to choose programmed function group.
- 3、 Long press **【FPX】** key which allocated as MEM function , the LCD displays memory channel number, turn channel switch to choose channel number(CH-01~CH-08), Long press **【MEM】** key until LCD displays the stored channel.

Note:

- ①when the channel number is not flash, means the channel already stored into memory channel.
- ②when the channel number is flash, means the channel is not into memory channel.

BND: Norms control

- 1、 short press **【FUNC】** key to choose programmed function group.
- 2、 short press **【FPX】** key which allocated as BND function, LCD displays BND:XX.
- 3、 short press it again or turn channel switch to wanted norms.
- 4、 Press **【PUSH】** key or **【FUNC】** key to store setting and exit, or wait 10s to automatically store setting and exit.

DW: Dual-watch control

- 1、 Choose first dual-watch channel
- 2、 short press **【FUNC】** key to choose programmed function group.
- 3、 short press **【FPX】** key which allocated as DW function, LCD flashes and displays “**D**”
- 4、 turn channel switch to choose second channel, short press allocated **【FPX】** key again to turn on DW function, LCD displays “**D**”
- 5、 Press **【PUSH】** key or **【FUNC】** key to exit dual-watch function.

CAL: transmit DTMF code

- 1、 short press **【FUNC】** key to choose programmed function group.
- 2、 short press **【FPX】** key which allocated as CAL function.
- 3、 short press it again or turn channel switch to choose code.
- 4、 Press **【PUSH】** key or **【FUNC】** key to store setting and exit, or wait 10s to automatically store setting and exit.

NB: NB function

- 1、 short press **【FUNC】** key to choose programmed function group.
- 2、 short press **【FPX】** key which allocated as NB function, LCD displays NB:XX.
- 3、 short press it again or turn channel switch to NB function between ON-OFF.
- 4、 Press **【PUSH】** key or **【FUNC】** key to store setting and exit, or wait 10s to automatically store setting and exit.

RB: RB function

- 1、 short press **【FUNC】** key to choose programmed function group.
- 2、 short press **【FPX】** key which allocated as RB function, LCD displays RB:XX.
- 3、 short press it again or turn channel switch to choose RB group
- 4、 Press **【PUSH】** key or **【FUNC】** key to store setting and exit, or wait 10s to automatically store setting and exit.

HIC: HI-CUT function

- 1、 short press **【FUNC】** key to choose programmed function group.
- 2、 short press **【FPX】** key which allocated as HIC function, LCD displays HIC:XX.
- 3、 short press it again or turn channel switch to switch between ON→OFF.
- 4、 Press **【PUSH】** key or **【FUNC】** key to store setting and exit, or wait 10s to automatically store setting and exit.

CDT: CTCSS/DCS encode (optional)

- 1、 short press **【FUNC】** key to choose programmed function group.
- 2、 Repeatedly short press **【FPX】** key which allocated as CDT function , LCD displays :
CDT:OFF Turn off CTCSS/DCS encode function.
CTC:XX 67.0Hz~250.3Hz, total 38 groups.
DCS:XX D023N~D754N, total 104 groups.
- 3、 After choose code mode, turn channel switch to choose code group.
- 4、 Press **【PUSH】** key or **【FUNC】** key to store setting and exit, or wait 10s to automatically store setting and exit.

B. Function menu control:

How to enter function menu:

- 1、 Long press **【FUNC】** key to enter SELECT MENU interface.
- 2、 short press**【FP4】**key. **【FP6】**key or turn channel switch to move cursor, to choose menu, (Note: short press **【FP5】** key will fast turn menu page) .
- 3、 Press **【PUSH】** key to enter FUNC MENU .
- 4、 short press**【FP4】**key. **【FP6】**key or turn channel switch to move cursor to set for choose function

1. BEEP: Beep sound

- 1、 Enter FUNC MENU, choose NO. 1 function menu.
- 2、 Press **【PUSH】**key to enter function setting, the chosen menu value in LCD will turn to green color.
- 3、 turn channel switch to choose wanted setting.
ON: turn on BEEP function.
OFF: turn off BEEP function.
- 4、 Press **【PUSH】** key or **【FP3】** key to confirm and exit..

2. TOT: Time out timer

- 1、 Enter FUNC MENU, choose NO. 2 function menu.
- 2、 Press **【PUSH】**key to enter function setting, the chosen menu value in LCD will turn to green color.
- 3、 turn channel switch to choose wanted setting. This radio has OFF~30Min, total 30minutes available. , OFF is turn off TOT function.
- 4、 Press **【PUSH】** key or **【FP3】** key to confirm and exit..

3. DIM: backlight level control

- 1、 Enter FUNC MENU, choose NO. 3 function menu.
- 2、 Press **【PUSH】**key to enter function setting, the chosen menu value in LCD will turn to green color.
- 3、 turn channel switch to choose wanted setting. This radio has 1,2,3 total 3 level available.
- 4、 Press **【PUSH】** key or **【FP3】** key to confirm and exit..

4. VOL: Volume level control

- 1、 Enter FUNC MENU, choose NO. 4 function menu.
- 2、 Press **【PUSH】**key to enter function setting, the chosen menu value in LCD will turn to green color.
- 3、 Turn channel switch to choose wanted level, This radio has 1~56 total 56 levels

available.

- 4、 Press **【PUSH】** key or **【FP3】** key to confirm and exit..

5. **SQL: Squelch level**

- 1、 Enter FUNC MENU, choose NO. 5 function menu.
- 2、 Press **【PUSH】**key to enter function setting, the chosen menu value in LCD will turn to green color.
- 3、 Turn channel switch to choose wanted level, This radio has OFF~28 total 29 levels available.
- 4、 Press **【PUSH】** key or **【FP3】** key to confirm and exit..

6. **ASQ: ASQ level**

- 1、 Enter FUNC MENU, choose NO. 6 function menu.
- 2、 Press **【PUSH】**key to enter function setting, the chosen menu value in LCD will turn to green color.
- 3、 Turn channel switch to choose wanted level, This radio has 1~9 total 9 levels available.
- 4、 Press **【PUSH】** key or **【FP3】** key to confirm and exit..

7. **RFG: RF gain**

- 1、 Enter FUNC MENU, choose NO. 7 function menu.
- 2、 Press **【PUSH】**key to enter function setting, the chosen menu value in LCD will turn to green color.
- 3、 Turn channel switch to choose wanted level, This radio has AU. OFF~30 total 12 levels available.
AU: Turn on automatically RF gain control.
OFF~30: Turn on RF gain control, each level stands for attenuated level.
- 4、 Press **【PUSH】** key or **【FP3】** key to confirm and exit..

8. **DSP: Channel/frequency display mode**

- 1、 Enter FUNC MENU, choose NO. 8 function menu.
- 2、 Press **【PUSH】**key to enter function setting, the chosen menu value in LCD will turn to green color.
- 3、 Turn channel switch to choose wanted setting..
- 4、 Press **【PUSH】** key or **【FP3】** key to confirm and exit..

9. **KEYs: key function group setting**

- 1、 Enter FUNC MENU, choose NO. 9 function menu.
- 2、 Press **【PUSH】**key to enter function setting, the chosen menu value in LCD will turn

to green color.

- 3、 Turn channel switch to choose wanted setting. This radio has 1/2/3. 1/2. 2/3. 1/3 total 4 combinations available.
- 4、 Press **【PUSH】** key or **【FP3】** key to confirm and exit..

10. SCM: scan method

- 1、 Enter FUNC MENU, choose NO. 10 function menu.
- 2、 Press **【PUSH】**key to enter function setting, the chosen menu value in LCD will turn to green color.
- 3、 Turn channel switch to choose wanted setting.
SQ: Squelch scan.
TI: time scan.
- 4、 Press **【PUSH】** key or **【FP3】** key to confirm and exit..

11. SCRT: scan exit time setting

- 1、 Enter FUNC MENU, choose NO. 11 function menu.
- 2、 Press **【PUSH】**key to enter function setting, the chosen menu value in LCD will turn to green color.
- 3、 Turn channel switch to choose wanted setting. This radio has 5S~30S total 6 levels available.
- 4、 Press **【PUSH】** key or **【FP3】** key to confirm and exit..

12. SQs: Squelch open/close offset setting.

- 1、 Enter FUNC MENU, choose NO. 12 function menu.
- 2、 Press **【PUSH】**key to enter function setting, the chosen menu value in LCD will turn to green color.
- 3、 Turn channel switch to choose wanted setting. This radio has 1~7 total 7 levels available, bigger digit stands for high offset value.
- 4、 Press **【PUSH】** key or **【FP3】** key to confirm and exit..

13. AQs: ASQ open/close offset setting.

Enter FUNC MENU, choose NO. 13 function menu.

- 1、 Press **【PUSH】**key to enter function setting, the chosen menu value in LCD will turn to green color.
- 2、 Turn channel switch to choose wanted setting. This radio has 1~7 total 7 levels available, bigger digit stands for high offset value.
- 3、 Press **【PUSH】** key or **【FP3】** key to confirm and exit..

14. AOP: Automatic power on

- 1、 Enter FUNC MENU, choose NO. 14 function menu.
- 2、 Press **【PUSH】**key to enter function setting, the chosen menu value in LCD will turn to green color.
- 3、 Turn channel switch to choose wanted setting.
ON: Turn on Automatic power on.
OFF: Turn off Automatic power on.
- 4、 Press **【PUSH】** key or **【FP3】** key to confirm and exit..

15. **RET: Resume factory default**

- 1、 Enter FUNC MENU, choose NO. 15 function menu.
- 2、 Press **【PUSH】**key to enter function setting, the chosen menu value in LCD will turn to green color.
- 3、 Turn channel switch to choose wanted setting.
OPT: All function settings resume factory default.
ALL: All channel and function settings resume factory default.
- 4、 Press **【PUSH】** key to confirm.
- 5、 Press **【FP3】** key to stop and exit resume default function,

16. **WIHD: Wireless microphone setting**

- 1、 Enter FUNC MENU, choose NO. 16 function menu.
- 2、 Press **【PUSH】**key to enter function setting, the chosen menu value in LCD will turn to green color.
- 3、 Turn channel switch to choose wanted setting.
SET: .
CLR: .
- 4、 Press **【PUSH】** key or **【FP3】** key to confirm and exit..

C. **Public menu setting**

Enter public menu:

1. Long press **【FUNC】** key to enter main MENU interface.
2. short press**【FP4】**key. **【FP6】**key or channel switch to move cursor, to choose menu group. (Note: short press **【FP5】** key can fast turn page)
3. Press **【PUSH】** key to enter PUD MENU .
4. short press**【FP4】**key. **【FP6】**key or channel switch to move cursor, to choose wanted menu setting..
5. Press **【PUSH】**key to enter function setting, the chosen menu value in LCD will turn to green color.
6. Turn channel switch to choose wanted setting.
7. Press **【PUSH】** key or **【FP3】** key to confirm and exit..

| NO. | LCD display | Function detail | Setting details |
|-----|--------------|-----------------------------|--|
| 1 | A/FM XXX | AM/FM switch | FM: Turn on FM mode. AM: Turn on AM mode. Default: FM |
| 2 | NB XXX | NB on/off | OFF: Turn off NB function.. ON: Turn on NB function.. Default: ON |
| 3 | HIC XXX | HI-CUT on/off | OFF: Turn off HI-CUT function.. ON: Turn on HI-CUT function.. Default: OFF |
| 4 | ROG XXX | RB groups setting | OFF-5, total 6 groups OFF: Turn off RB function.. Default: OFF |
| 5 | CDT XXX | CTCSS/DCS encode setting | Long press【 PUSH 】key to choose wanted setting: CTC: 67.0Hz~250.3Hz, total 38 groups. DCS: D023N~D754N, total 104 groups. Default: OFF: Turn off CTCSS/DCS encode. Long press【 PUSH 】key to confirm and exit.. Note: This is function is optional. |
| 6 | BUSY XXX | Busy channel lock | OFF: Turn off busy channel lock function.. ON: Turn on busy channel lock function.. Default: OFF |
| 7 | BOT XXX | Call setting | OFF: Press PTT will not transmit DTMF code. 1~16: Press PTT to transmit DTMF code.. Default: OFF |
| 8 | EOT XXX | Call setting | OFF: Release PTT will not transmit DTMF code.. 1~16: Release PTT to transmit |

| | | | |
|---|----------|--------------|---|
| | | | DTMF code.. Default: OFF |
| 9 | CALL XXX | Call setting | OFF: Press CALL key will not transmit DTMF code.. 1~16: Press CALL key to transmit DTMF code.. Default: OFF |

Note: Only when current channel has store DTMF group, the Call setting will work

(Refer to DTMF MENU setting)

D. Channel menu setting:

How to enter channel menu:

1. Long press **【FUNC】** key to enter main MENU interface.
2. short press **【FP4】** key. **【FP6】** key or Turn channel switch to move cursor, to choose menu group. (short press **【FP5】** key can fast turn page) .
3. Press **【PUSH】** key enter channel menu .
4. short press **【FP4】** key. **【FP6】** key or Turn channel switch to move cursor to choose wanted menu setting.. (short press **【FP5】** key can fast turn page) .
5. Press **【PUSH】** key to enter function setting, the chosen menu value in LCD will turn to green color.
6. Turn channel switch to choose wanted setting.
7. Press **【PUSH】** key or **【FP3】** key to confirm and exit..

| NO. | LCD display | Function detail | Setting details |
|-----|-------------|------------------------|--|
| 1 | PD XXX | Public channel setting | OFF: Public setting disable the separate channel setting is |

| | | | |
|---|-------------|-----------------------------|--|
| | | | <p>valid for single channel only,</p> <p>ON: The public setting is valid for all channels.</p> <p>Default: OFF</p> |
| 2 | SCAN XXX | Scan add/delete setting | <p>ADD: Current channel add into scan list</p> <p>DEL: current channel delete from scan list</p> <p>Default: ADD</p> |
| <p>When PD is on, the following menu is hiding, when PD is OFF, the following menu will appear.</p> | | | |
| 3 | A/FM XXX | mode setting | <p>FM: Turn on FM mode.</p> <p>AM: Turn on AM mode.</p> <p>Default: FM</p> |
| 4 | NB XXX | NB function. setting | <p>OFF: Turn off NB function..</p> <p>ON: Turn on NB function..</p> <p>Default: ON</p> |
| 5 | HIC XXX | HI-CUT function. setting | <p>OFF: Turn off HI-CUT function..</p> <p>ON: Turn on HI-CUT function..</p> <p>Default: OFF</p> |
| 6 | ROG XXX | RB setting | <p>OFF-5, total 6 groups available.</p> <p>OFF: Turn off RB function..</p> <p>Default: OFF</p> |

| | | | |
|----|----------|--------------------------------|--|
| 7 | CDT XXX | CTCSS/DCS encode setting | <p>Long press 【PUSH】 key to choose wanted setting:</p> <p>CTC: 67.0Hz~250.3Hz, total 38 groups.</p> <p>DCS: D023N~D754N, total 104 groups.</p> <p>Default: OFF: Turn off CTCSS/DCS encode.</p> <p>Long press 【PUSH】 key to confirm and exit..</p> <p>Note: This is function is optional.</p> |
| 8 | BUSY XXX | Busy channel lock function. | <p>OFF: Turn off busy channel lock function..</p> <p>ON: Turn on busy channel lock function..</p> <p>Default: OFF</p> |
| 9 | BOT XXX | Call setting | <p>OFF: Press PTT will not transmit DTMF code.</p> <p>1~16: Press PTT to transmit DTMF code..</p> <p>Default: OFF</p> |
| 10 | EOT XXX | Call setting | <p>OFF: Release PTT will not transmit DTMF code..</p> <p>1~16: Release PTT to transmit DTMF code..</p> |

| | | | |
|----|----------|--------------|---|
| | | | Default: OFF |
| 11 | CALL XXX | Call setting | OFF: Press CALL key will not transmit DTMF code.. 1~16: Press CALL key to transmit DTMF code.. Default: OFF |

Note: Only when current channel has store DTMF group, the Call setting will work

(Refer to DTMF MENU setting)

E. DTMF encode setting

How to enter DTMF encode setting:

- 1、 Long press **【FUNC】** key to enter main MENU interface.
short press **【FP4】** key. **【FP6】** key or Turn channel switch to move cursor, to choose menu group. (short press **【FP5】** key can fast turn page) .
- 2、 Press **【PUSH】** key to enter DTMF MENU .
- 3、 short press**【FP4】**key. **【FP6】**key or Turn channel switch to move cursor to choose wanted setting.
- 4、

1. DTMF: Encode setting

- 1、 Enter DTMF MENU, choose NO. 1 function menu.
- 2、 Press **【PUSH】**key to enter function setting, the chosen menu value in LCD will turn to green color.
- 3、 Turn channel switch to choose group.
- 4、 Long press **【PUSH】** key edit code, Yellow character stands for current editing digit, Turn channel switch to edit it, Press **【PUSH】** key to edit next digit.
- 5、 Long press **【PUSH】** key or **【FP3】** key to confirm and exit..

2. SND-T: Transmit time setting

- 1、 Enter DTMF MENU, choose NO. 2 function menu.
- 2、 Press **【PUSH】**key to enter function setting, the chosen menu value in LCD will turn to green color.
- 3、 Turn channel switch to choose group, This radio has 10ms~500ms total 50 levels available.
- 4、 Press **【PUSH】** key or **【FP3】** key to confirm and exit..

3. **FIR-T: First digit time setting**

- 1、 Enter DTMF MENU, choose NO. 3 function menu.
- 2、 Press **【PUSH】**key to enter function setting, the chosen menu value in LCD will turn to green color.
- 3、 Turn channel switch to choose group, This radio has 0~1000ms total 11 levels available.
- 4、 Press **【PUSH】** key or **【FP3】** key to confirm and exit..

4. **PRE-T: Pre-loading time setting**

- 1、 Enter DTMF MENU, choose NO. 4 function menu.
- 2、 Press **【PUSH】**key to enter function setting, the chosen menu value in LCD will turn to green color.
- 3、 Turn channel switch to choose group, This radio has 100ms~2500ms total 25 levels available.
- 4、 Press **【PUSH】** key or **【FP3】** key to confirm and exit..

5. **DELAY: #. * delay time setting**

- 1、 Enter DTMF MENU, choose NO. 5 function menu.
- 2、 Press **【PUSH】**key to enter function setting, the chosen menu value in LCD will turn to green color.
- 3、 Turn channel switch to choose group, This radio has 0~1000ms total 4 levels available.
- 4、 Press **【PUSH】** key or **【FP3】** key to confirm and exit..

6. **D-FUN: D function key setting**

- 1、 Enter DTMF MENU, choose NO. 6 function menu.
- 2、 Press **【PUSH】**key to enter function setting, the chosen menu value in LCD will turn to green color.
- 3、 Turn channel switch to choose group, This radio has D~16S total 17 levels available.
- 4、 Press **【PUSH】** key or **【FP3】** key to confirm and exit..

7. **DISP: Code display setting**

- 1、 Enter DTMF MENU, choose NO. 7 function menu.
- 2、 Press **【PUSH】**key to enter function setting, the chosen menu value in LCD will turn to green color.
- 3、 Turn channel switch to choose setting:
ON: When transmitting DTMF code, LCD displays corresponding setting.

OFF: When transmitting DTMF code, LCD not display corresponding setting.

- 4、 Press **【PUSH】** key or **【FP3】** key to confirm and exit..

Self –define key setting:

- 1、 Long press **【FUNC】** key to enter main MENU interface.
short press **【FP4】**key. **【FP6】**key or Turn channel switch to move cursor, to choose menu group. (short press **【FP5】** key can fast turn page) .
- 2、 Press **【PUSH】** key to KEY MENU .
- 3、 Turn channel switch to choose wanted function
- 4、 short press **【PUSH】** key to choose Key function group.
- 5、 short press **【FUNC】** key to choose the key for allocated the function.
- 6、 Press **【FP3】** key to confirm and exit..