

Table 3.1 User channel selection table for 5380 & AE4180XL:

Downloaded from www.cbradio.nl

SI	SE	SA	No. of channels	Band assignment	LCD to be used
0	0	0	40	band C	5380
0	0	1	80	band C and some channels of band B
0	1	0	240	band A, B, C, D, E, F
0	1	1	400	band A, B, C, D, E, F, G, H, I, J
1	0	0	40	C band only 40 chl	AE 4180XL
1	0	1	80	C band only 80 chl	AE 4180XL

AM/FM mode selection

There are four AM/FM modes can be selected according to the table 3.2.

Table 3.2 : AM/FM jumper selection table

S K	S G	Modes
1	1	AM/FM (all bands)
0	1	FM only
1	0	AM only
0	0	AM for 12-channel only (C 4 - C 15)

"1" means diode is connected in the specified location.
 "0" means no diode is connected in the specified location