

FREQUENCY BAND TABLE

Downloaded from www.cbradio.nl

| | | | | |
|--|---|--|--|---|
| U701 #4 U701 #3 | INPUT VOLT LOWER 1V R709: . R710: 100K | INPUT VOLT LOWER 2V R709: 220K R710: 100K | INPUT VOLT LOWER 3V R709: 100K R710: 100K | INPUT VOLT LOWER 4V R709: 39K R710: 100K |
| INPUT VOLT LOWER 1V R 711: R 712:100K | SWEDEN 31MHz | ITALY 43MHz | 240 CHANNEL | 40 CHANNEL |
| INPUT VOLT LOWER 2V R 711:220K R 712:100K | GERMANY 80FM/12AM | POLAND 240 CHANNEL | POLAND 40 CHANNEL | 10 METER 28MHz AM 29MHz FM |
| INPUT VOLT LOWER 3V R 711:100K R 712:100K | | SWISS 22 CHANNEL | 6 METER | 240 CHANNEL + 10 METER |

VOLTAGE FOR START MODE OPTION

| | | | | |
|---------|-----------------------------------|--|---|---|
| U701 #2 | R707 : R708 : 100K (0 VOLT) | R707 : 150K R708 : 100K (1.9 VOLT) | R707 : 56K R708 : 100K (3.1 VOLT) | R707 : 10K R708 : 100K (4.4 VOLT) |
| MODE | FM START IN A/F MODE | AM ONLY | FM ONLY | AM START IN A/F MODE |

MODIFICATION RF-POWER

| MODIFICATION | SW 1 | SW 2 |
|------------------|-------|-------|
| MODE | | |
| FM 4 / AM 4 WATT | SHORT | SHORT |
| AM 4 / AM 1 WATT | OPEN | SHORT |
| FM 4 WATT ONLY | OPEN | OPEN |