

AnyTone[®]

Downloaded
from
www.cbradio.nl

 


AT-5000

 
Modification



 
AT-5000 Band & Power expansion

CB Mode: 26.565-27.99125MHz								How to expand	Detail picture on PCB
BAND Name	CH numbers	Frequency Range	MODE					Power	1.J802短路帽装在1-2位置 The J802 short circuit cap is installed in the 1-2 position.
			AM	FM	SSB	CW	PA		
EU	40CH	26.965-27.405MHz	√	√	√	√	√		
PL	40CH	26.960-27.400MHz	√	√	×	√	√		
		26.965-27.405MHz	×	×	√	×	√		
DE	80CH	40CH: 26.965-27.405MHz	√	√	√	√	√		
		80CH: 26.565-26.955MHz	×	√	×	×	√		
EC	40CH	26.965-27.405MHz	×	√	×	×	√		
U	U:40CH	26.965-27.405MHz	√	√	√	√	√		
	UK:40CH	27.60125-27.99125MHz	×	√	×	×	√		
In	27CH	26.965-27.275MHz	√	√	√	√	√		

 
备注：关机状态下,按住MODE键不放开机选择国家模式,再长按确认保存关机,在PL模式下AM/FM频率为0结尾,SSB模式下频率为5结尾
 Note: In the power-off state, hold down the MODE key to turn on the radio and select band, then press and hold it to save and power off. In PL mode, AM/FM frequencies end with 0, while in SSB mode frequencies end with 5.

CB Mode: 26.565-27.99125MHz								How to expand	Detail picture on PCB
BAND Name	CH numbers	Frequency Range	MODE					Power	1.J802短路帽装在2-3位置 The J802 short circuit cap is installed in the 2-3 position.
			AM	FM	SSB	CW	PA		
EU	40CH	26.965-27.405MHz	√	√	√	√	√		
PL	40CH	26.960-27.400MHz	√	√	×	√	√		
		26.965-27.405MHz	×	×	√	×	√		
DE	80CH	40CH: 26.965-27.405MHz	√	√	√	√	√		
		80CH: 26.565-26.955MHz	×	√	×	×	√		
EC	40CH	26.965-27.405MHz	×	√	×	×	√		
U	U:40CH	26.965-27.405MHz	√	√	√	√	√		
	UK:40CH	27.60125-27.99125MHz	×	√	×	×	√		
In	27CH	26.965-27.275MHz	√	√	√	√	√		

备注：关机状态下,按住FUNC键不放开机选择CB,再长按确认保存关机,按住MODE键不放开机选择国家模式
 Note: In the power-off state, hold down the FUNC key to turn on the radio and select CB, then press and hold it to save and power off. Press and hold MODE key to turn on radio and select the Band.

HAM Mode: 28.000-29.7000MHz								How to expand	Detail picture on PCB
BAND Name	CH numbers	Frequency Range	MODE					Power	1.J802的短路帽装在2-3位置 The J802 short circuit cap is installed in the 2-3 position.
			AM	FM	SSB	CW	PA		
A	40CH	28.000-28.195MHz	√	√	√	√	√		
B	40CH	28.200-28.395MHz	√	√	√	√	√		
C	40CH	28.400-28.595MHz	√	√	√	√	√		
D	40CH	28.600-28.795MHz	√	√	√	√	√		
E	40CH	28.800-28.995MHz	√	√	√	√	√		
F	40CH	29.000-29.195MHz	√	√	√	√	√		
G	40CH	29.200-29.395MHz	√	√	√	√	√		
H	40CH	29.400-29.595MHz	√	√	√	√	√		
I	20CH	29.600-29.695MHz	√	√	√	√	√		

备注：关机状态下,按住FUNC键不放开机选择HAM,再长按确认保存关机,按FUNC+BAND键当前BAND闪烁时，旋转VOL旋钮或按UP/DN键切换BADN
 Note:In the power-off state,hold down the FUNC key to turn on the radio and select HAM, then press and hold it to save and power off. Press and hold FUNC+BAND key until the current band is flashing, turn the VOL knob or press UP/DN key to switch the Band.

Expand2 Mode: 24.715-30.105MHz								How to expand	Detail picture on PCB
BAND Name	CH numbers	Frequency Range	MODE					Power	
			AM	FM	SSB	CW	PA		
A	40CH	25.615-26.055MHz	√	√	√	√	√	1.J802的短路帽装在2-3位置 The J802 short circuit cap is installed in the 2-3 position.	
B	40CH	26.065-26.505MHz	√	√	√	√	√		
C	40CH	26.515-26.955MHz	√	√	√	√	√		
D	40CH	26.965-27.405MHz	√	√	√	√	√		
E	40CH	27.415-27.855MHz	√	√	√	√	√		
F	40CH	27.865-28.305MHz	√	√	√	√	√		
G	40CH	28.315-28.755MHz	√	√	√	√	√		
H	40CH	28.765-29.205MHz	√	√	√	√	√		
I	40CH	29.215-29.655MHz	√	√	√	√	√		
J	40CH	29.665-30.105MHz	√	√	√	√	√		
K	40CH	24.715-25.155MHz	√	√	√	√	√		
L	40CH	25.165-25.605MHz	√	√	√	√	√		

备注：关机状态下,按住FUNC键不放开机选择HF,再长按确认保存关机,按FUNC+BAND键当前BAND闪烁时，旋转VOL旋钮或按UP/DN键切换BADN
 Note:In the power-off state,hold down the FUNC key to turn on the radio and select HF, then press and hold it to save and power off. Press and hold FUNC+BAND key until the current band is flashing, turn the VOL knob or press UP/DN key to switch the Band.

AnyTone[®]

Qixiang Electron Science & Technology Co.,Ltd.

www.anytone.net