



CB Mode : 26.965-27.405MHz				
BAND	Channels	Frequency	Mode	Power
	40CH	26.965-27.405MHz	AM/FM	FM: 4W AM: 4W

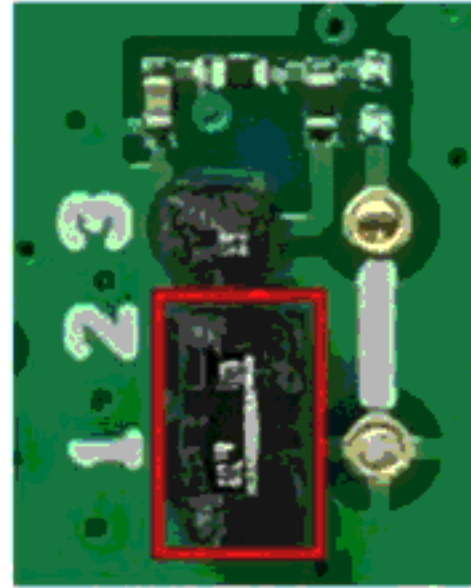

Jump cap between 1/2

Expand Mode : 24.715-30.105MHz				
BAND	Channels	Frequency	Mode	Power
A	45CH	25.615-26.055MHz	AM/FM	FM/AM : 8W
B	45CH	26.065-26.505MHz		
C	45CH	26.515-26.955MHz		
D	45CH	26.965-27.405MHz		
E	45CH	27.415-27.855MHz		
F	45CH	27.865-28.305MHz		
G	45CH	28.315-28.755MHz		
H	45CH	28.765-29.205MHz		
I	45CH	29.215-29.655MHz		
J	45CH	29.665-30.105MHz		
K	45CH	25.165-25.605MHz		
L	45CH	24.715-25.155MHz		

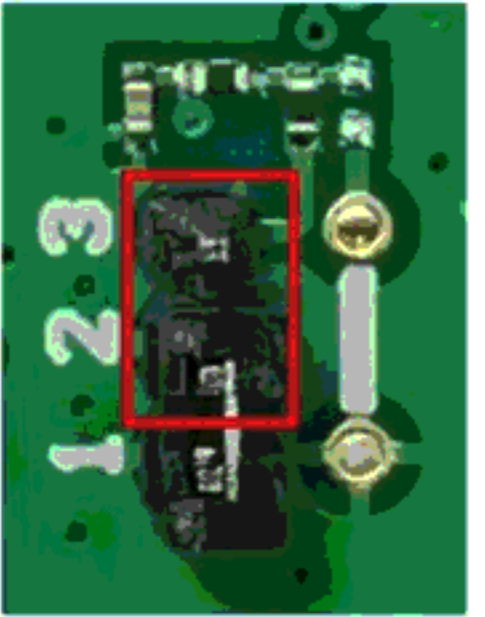

Jump cap between 2/3



Change BAND Operation :

1. Short press PUSH knob after PUSH knob to change the BAND , the BAND is displayed on LED;
2. Turn the rotary knob or press the UP/DN buttons on the microphone to choose band;
3. Long press PUSH knob to confirm.

RF power :

1. Long press PUSH knob to enter menu.
2. Turn the rotary knob or press the UP/DN buttons on the microphone to select the RF

Power function.

3. Press the PUSH knob to validate, the option blinks on the display.
4. Turn the rotary knob or press the UP/DN buttons on the microphone to select the option.
5. Press the PUSH knob to confirm.