

## CRT 2000 H function, frequency expand



- 1、 Remove L45 line
- 2、 Hold [FUNC]+[FP6] to power on radio, when LCD displays band, release keys.
- 3、 turn channel knob to choose band;
- 4、 Long press [PUSH] to confirm , when LCD displays “RESET MPU PLEASE WAIT” , release PUSH

Maintenir les touches [FUNC] + [FP6] en allumant la radio  
 Choisir la bande et confirmer en maintenant la touche [PUSH]  
 L'afficheur indique « RESET MPU PLEASE WAIT », relâchez la touche [PUSH]

CB: 26.565-27.99125MHz					LCD display
BAND	channels	frequency	Mode	power	<div style="background-color: black; color: white; padding: 10px; border: 1px solid black;">                     MODE: CB FRQ                      VFO: Null                      FREQ: Fixed                 </div>
EU	40CH	26.965-27.405MHz	AM/FM	AM/FM:4W	
CE	40CH	26.965-27.405MHz	FM		
U	U:40CH	26.965-27.405MHz	AM/FM		
	UK:40CH	27.60125-27.99125MHz	FM		
PL	40CH	26.960-27.400MHz	AM/FM		
I2	36CH	26.965-26.865MHz	AM/FM		
DE	80CH	40CH: 26.965-27.405MHz	AM/FM		
		80CH: 26.565-26.955MHz	FM		
IN	27CH	26.965-27.275MHz	AM/FM		

Note: Hold [FUNC] while power on, turn channel knob to choose BAND, hold [PUSH] to confirm.

Remarque: Appuyer et maintenez la touche [FUNC] tout en allumant l'appareil, tournez le rotacteur de canaux pour choisir la BAND, appuyer sur la touche [PUSH] pour confirmer.

HAM: 28.000-29.700MHz					LCD display
BAND	channels	frequency	Mode	power	<div style="background-color: black; color: white; padding: 10px; border: 1px solid black;">                     MODE: HAM FRQ                      VFO: Enable                      FREQ: Variable                      28.000-29.700MHz                 </div>
A	40CH	28.000-28.195MHz	AM/FM	AM:4W/10W FM:4W/10W/40W	
B	40CH	28.200-28.395MHz			
C	40CH	28.400-28.595MHz			
D	40CH	28.600-28.795MHz			
E	40CH	28.800-28.995MHz			
F	40CH	29.000-29.195MHz			
G	40CH	29.200-29.395MHz			
H	40CH	29.400-29.595MHz			
I	20CH	29.600-29.700MHz			
VFO					

HF: 25.615-30.105MHz	LCD display
----------------------	-------------

BAND	channels	frequency	Mode	power
A	40CH	25.615-26.005MHz	AM/FM	AM:4W/10W FM:4W/10W/40W
B	40CH	26.065-26.505MHz		
C	40CH	26.515-26.955MHz		
D	40CH	26.965-27.405MHz		
E	40CH	27.415-27.855MHz		
F	40CH	27.865-28.305MHz		
G	40CH	28.315-28.755MHz		
H	40CH	28.765-29.205MHz		
I	40CH	29.215-29.655MHz		
J	40CH	29.665-30.105MHz		
VFO				

MODE: HF FRQ  
VFO: Enable  
FREQ: Variable  
25.615-30.105MHz