

# CRT SS7900 V



 
## EXPAND :

- Press and hold **MENU+EMG** keys at the same time and followed by powering on the radio
- Choose BAND 1 or BAND 2
- Press **MENU** keys few second for to validate.

BAND 1 = 28-29.7MHZ --- BAND 2 = 24.715-30.105 Mhz

## RESET :

- Press **MENU** key, choose the RESET menu (menu #19).  
(to select OPT or ALL press the Channel Rotator and rotate as desired)
- confirm by pressing the channel rotator  
(this handling must be done quickly otherwise the Reset don't work)
- RESALL or RESOPT is displayed, wait for RESEND to appear
- The screen turns off and on again
- The RESET is complet

19	Reset		OPT: All function setup resume default; ALL: All channels and setup resume default Default: OPT
----	-------	---	---