

# danita<sup>®</sup> 310M

## Mobile CB Radio



### USER'S MANUAL UK

CE 0678



Downloaded from [www.cbradio.nl](http://www.cbradio.nl)



## ■ WARNING

Please install the antenna (connect to the location “B” on the back panel of the radio) and set the SWR (Standing Wave Ratio) before transmitting. Failure to do so may result in destruction of the power amplifier, which is not covered by the guarantee.

## ■ WELCOME TO USE

310M is a Multi-norms and multi-function CB radio which provides you with top performance.

With the use of SMT technology to guarantee the best stability, reliability and unprecedented quality, 310M is a new step in personal communication and is surely the best choice for professional users of CB radios. Moreover, it adopts flash CPU in the radio, which makes 310M ready for future upgrading and functions expanding. To ensure that you use the radio to the fullest, please read this manual carefully before installing.

## ■ RESET

-Hold key (7) [ CH9/19 ] to power on, the radio will reset, all channel data will resume factory default setting.

---

---

# CONTENTS


<b>INSTALLATION</b> .....	1
WHERE AND HOW TO MOUNT YOUR MOBILE CB RADIO.....	1
ANTENNA INSTALLATION.....	1
POWER CONNECTION.....	2
BASIC OPERATIONS.....	2
ADJUSTMENT OF SWR(standing wave ratio).....	2
<b>HOW TO USE YOUR CB RADIO</b> .....	4
ON/OFF-VOLUME .....	4
MANUAL SQUELCH .....	4
AUTOMATIC SQUELCH .....	4
CHANNEL SELECTION.....	4
MODULATION MODE SELECTION .....	4
NORM SELECTION .....	4
AUTOMATIC SCANNING.....	4
PRIORITY CHANNEL9/19.....	5
TRANSMITTING .....	5
EXTERNAL SPEAKER JACK .....	5
EC declaration .....	6
<b>TECHNICAL CHARACTERISTICS</b> .....	7

---

## ■ INSTALLATION

### 1. WHERE AND HOW TO MOUNT YOUR MOBILE CB RADIO

- a) You should choose the most appropriate setting from a simple and practical point of view
- b) Your CB radio should not interfere with the driver or the passengers.
- c) Remember to provide different wires for the passing and protection (e.g. power, antenna, accessory cabling) so that they do not in any way interfere with the driving of vehicles.
- d) To install your equipment, use the cradle (H) and the self-tapping screws [E] provided (drilling diameter 4 mm). Take care not to damage the vehicle's electrical system while drilling the dash board.
- e) Do not forget to insert the rubber joints [G] between the CB and its support as these have a shock-absorbing effect which permits gentle orientation and tightening of the set.
- f) Choose where to place the microphone support and remember that the microphone cord must stretch to the driver without interfering with the controls of the vehicle.
- g) As the transceiver has a frontal microphone socket, it can be set into the dash board. You will need to add external loud speaker to improve the sound quality of communications (connector ext. SP situated on the back panel: D). Ask your dealer for advice on mounting your CB radio.

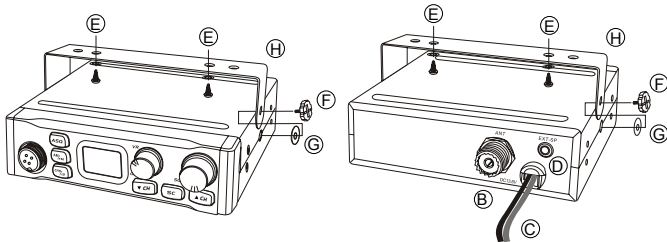

### 2. ANTENNA INSTALLATION

#### a) Choosing antenna:


- For CB radios, the longer the antenna, the better its results. Your dealer will help you with your choice of antenna.

#### b) Mobile antenna:

- Must be fixed to the vehicle where there is a maximum of metallic surface (ground plane), away from windscreen mountings.
- If you already have a radio-telephone antenna installed, the CB antenna should be higher than this.
- There are two types of antenna: Pre-regulated antenna which should be used on a good ground plane (e.g. car roof or lid of the boot), and adjustable antenna which offer a much larger frequency range and can be used on a smaller ground plane.
- For an antenna which must be fixed by drilling, you will need a good contact between the antenna and the ground plane. To obtain this, you should lightly scratch the surface where the screw and tightening star are to be placed.
- Be careful not to pinch or flatten the coaxial cable (as this runs the risk of break down and/or short circuiting).
- Connect the antenna to location (B).

#### c) Fixed antenna:

A fixed antenna should be installed in a space as spacious as possible. If it is necessary for you to fix the antenna to a mast, you need to keep it as per the requirements of the laws in force (please turn to professional advice).

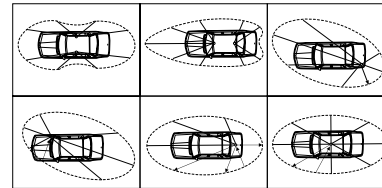

OUTPUT RADIUS PATTERNS


## 1. POWER CONNECTION

This is protected against an inversion of polarities. However, before switching it on, you are advised to check all the connections. Your equipment must be supplied with a continued current of 12 volts (A). Today, most cars and lorries are negative earth. You can check this by making sure that the negative terminal of the battery is connected either to the engine block or to the chassis. If this is not the case, you should consult your dealer.

**WARNING:** Lorries generally have two batteries to supply a voltage of 24 volts, in which case it will be necessary to insert a 24/12 volt converter into the electrical circuit. The following connection steps should be carried out with the power cable disconnected from the set.

- Check whether the battery is of 12 volts.
- Locate the positive and negative terminals of the battery (+ is red and - is black). Should it be necessary to lengthen the power cable, please use the same or a superior type of cable.
- It is necessary to connect your CB to a permanent (+) and (-). We advise you to connect the power cable directly to the battery (as the connection of the CB cable to the wiring of the car-radio or other parts of the electrical circuit may, in some cases, increase the possibilities of interference).
- Connect the red wire (+) to the positive terminal of the battery and the black (-) wire to the negative terminal of the battery.
- Connect the power cable to your CB radio.

**WARNING:** Never replace the original fuse (5A) by one of a different value.

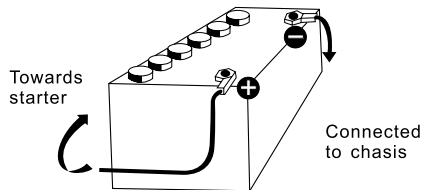

## 2. BASIC OPERATIONS


- Connect the microphone
- Check the antenna connections
- Turn the set on by turning the volume knob clockwise
- Turn the squelch knob to minimum (Full-anti clockwise)
- Adjust the volume to a comfortable level
- Go to channel 20 E by using either the [▲ CH] or [▼ CH] key.

## 3. ADJUSTMENT OF SWR(standing wave ratio)


**WARNING:** This must be carried out when you use your CB radio for the first time (and whenever you re-position your antenna). The adjustment must be carried out in an obstacle-free area.

\* **Adjustment should be operated with external SWR meter.**


- To connect the SWR meter
    - Connect the SWR meter between the CB radio and the antenna as close as possible to the CB radio (use a maximum of 40cm cable)
  - To adjust the SWR meter
    - Set the CB to channel 20 E band in FM
    - put the switch on the SWR meter to position CAL or FWD
    - Press the <<Push-To-Talk>> switch on the microphone to transmit
    - Bring the index needle to ▼ by using the calibration key
    - Change the switch to position SWR (reading of the SWR level)  
The reading on the meter should be as near as possible to 1. If this is not the case, re-adjust your antenna to obtain a reading as close as possible to 1.( An SWR reading between 1 and 1.8 is acceptable).
    - It will be necessary to re-calibrate the SWR meter after each adjustment of the antenna.
- Your CB is now ready for use.

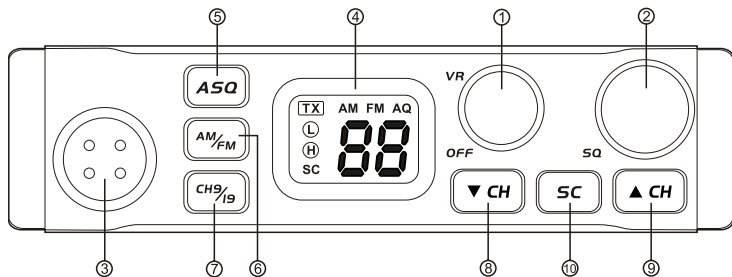

Front Panel

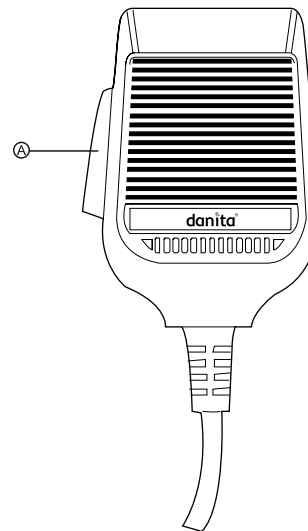

Microphone

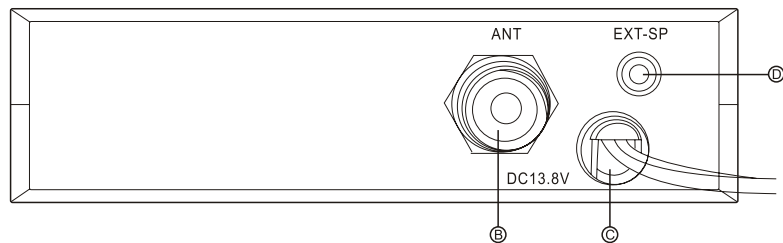

Back Panel

---

---

## ■ HOW TO USE YOUR CB RADIO

### 1. ON/OFF-Volume

- a) To turn the set on, turn the knob (1) clockwise.
- b) To increase the sound level, turn the same knob further clockwise.

### 2. Manual Squelch

Turn the SQ knob (2) clockwise to the exact point where all background noise disappears. Please note that this control is fine regulation, if you set this SQ control to the maximum (fully clockwise), the radio can only receive the strongest signal.

### 3. Automatic Squelch

The automatic squelch (ASQ) uses a preset average value. It can be activated by short key (5) [ ASQ ], The automatic squelch mode (AQ icon) is indicated on the LCD.

### 4. Channel selection

All channels can be selected by channel selector keys (8) [ ▼ CH ] or (9) [ ▲ CH ]. The selected channel is displayed on the LCD. In communication both transceivers (the receiving and transmitting party) need to be in the same channel and under same modulation type.

### 5. Modulation MODE selection

This key (6) [AM/FM] allows selecting the AM or FM modulation. Your modulation mode has to correspond to the one of your correspondent.

With the version Full Multi Norm in the norm UK, you can switch between the E.band and the UK band, which is indicated by symbol "E" or "UK", by pressing the key (6) [AM/FM].

The CB band E consists of the 40 CEPT channels. The CB band UK consists of 40 channels starting from 27.60125 MHz to 27.99125 MHz.

### 6. Norm Selection

The version Full Multi Norm can be set by the user to the following norms:

- D 80 FM (26.565 - 27.405 MHz), 4 W  
40 AM (26.965 - 27.405 MHz), 1W.
- EU 40 FM (26.965 - 27.405 MHz), 4 W  
40 AM (26.965 - 27.405 MHz), 1W.
- EC 40 FM (26.965 - 27.405 MHz), 4 W.
- UK 40 FM (27.60125 - 27.99125 MHz), 4 W  
40 FM (26.965 - 27.405 MHz), 4W.
- PL 40 FM (26.960 - 27.400 MHz), 4 W  
40 AM (26.960 - 27.400 MHz), 4W.
- E 40 FM (26.965 - 27.405 MHz), 4 W  
40 AM (26.965 - 27.405 MHz), 4W.
- US 40 AM (26.965 - 27.405 MHz), 4W.
- NZ 40 FM (26.330 - 26.770 MHz), 4 W  
40 AM (26.330 - 26.770 MHz), 4W.


To change current norm, please hold the key (6) [AM/FM] while turning the radio on. In the display, the symbol of the current norm appears, please select the norm by pressing the channel selector key(8) [ ▼ CH ] or (9) [ ▲ CH ]. To verify your selection, turn the radio off and on again, the radio automatically returns to the selected operation mode.

**Note:** The E norm is internally set to 40 channels FM+AM, 4 Watts only.

### 7. Automatic Scanning

Press the key (10) [SC] to enable the SCAN function. Before enabling the SCAN function, firstly turn the SQ control clockwise till the background noise is cut out. Then press the key (10) [SC], radio will automatically scan all channels and the SC icon will appear on the LCD.

When a signal is detected on a channel, scanning stops on this channel. You can receive the calling, and also, can transmit on



---

this channel by pressing PTT key. If there is no transmission or detected signal on that channel within 5 seconds, radio will start scanning again. To exit the SCAN function, press the SC Key or the PTT key.

#### **8. Priority Channel 9 / 19**

- It contains the priority channels 9 and 19. Priority channel 9 is selected by pressing the key (7) [ CH9/19 ] once. To set priority channel 19, press the key (7) [ CH9/19 ] twice.

#### **9. Transmitting**

To transmit, press and hold the key(A) [ PTT ] at the microphone and the TX icon will appear on the LCD.

For best quality, please speak normally at a distance of 2 - 4 inches. Speaking too loudly will cause distortions and make the signal difficult to understand.

On completion of the transmission release the PTT key and the radio will revert to receiving mode.

5

#### **10. External speaker jack**

The radio is equipped with a 3.5 mm jack socket (D) at the rear panel to connect an external speaker of 4 - 8 Ohm impedance. At 4 Ohm the speaker load can be 4 watts. When the external speaker is connected, the internal speaker will be switched off.



# EU DECLARATION OF CONFORMITY

I, the undersigned hereby declare that the following equipment complies with the essential requirements in the Directive 1999/5/EC of the European Parliament and of the Council of 9 March 1999 on radio equipment and telecommunication terminal equipment and the mutual recognition of their conformity

## 1. INFORMATION ON THE EQUIPMENT:

Equipment category:	CB radio
Manufacturer:	danita
Type or model designation:	310M
Marketing name:	danita 310M

## 2. NAME AND ADDRESS OF THE SIGNATORY (MANUFACTURER, IMPORTER OR EU REPRESENTATIVE)

Name:	danita electronics a/s	
Postal code/City:	2900 Hellerup, Denmark	e-mail: <a href="mailto:salg@danita.eu">salg@danita.eu</a>



## 3 INFORMATION ON THE STANDARD/STANDARDS USED IN CONNECTION WITH THE CONFORMITY ASSESSEMENT:

EN 300 135-1,-2	Technical standard for angle modulated Citizens Band Radio
EN 300 433-1,-2	Technical standard for Double Sideband amplitude modulation.
EN 301 489-1 + EN 301 489-13	EMC standard for Citizens Band Radio
EN 60 950-1 + A11	LVD Low Volt Directive.

## 4. REMARKS:

40 Ch CB Radio, 27 MHz. Remember: set the CB-radio up to the used country's regulations. (Channels, TX power + Modulation) CE0678(!)
--

## 5. SIGNATURE:

Place/Date: Hellerup 1/08-2014	Signature: 
Company name (stamp): 	



## ■ TECHNICAL CHARACTERISTICS

GENERAL	
Modulation modes	AM/FM
Frequency ranges	26.965---27.405MHz
Antenna impedance	50 Ohms
Power supply	13.2V
Dimensions(in mm)	150×140×41mm
Weight	761G
TRANSMISSION	
Frepency error	+/- 300HZ
Carrier power	1W/4W
Transmission interference	inferior to 4nW(-54dBm)
Audio response	300HZ to 3KHZ in AM/FM
Emitted power in the adj.channel	inferior to 20uW
Microphone sensitivity	3mV
Maximum current	max 3A
Modulated singal distortion	inferior to 5%
RECEPTION	
Max sensitivity at 20dB sinad	0.8uV -113 dBm FM 1.5uV -103 dBm AM
Frequency response	300HZ to 3KHZ in AM/FM
Adjacent channel selectivity	60dB
Maximum audio power	3W
Squelch sensitivity	Minimum 0.2uv -120 dBm Maximum 1mV -47 dBm
Maximum current	0.3A nominal/1.2A maximum