

# K-PO HR-2800


## BANDS TABLE

Channel	AM / FM	Frequency range	LCD Display	Remarks
<b>CB / EU Bands</b>				
40CH	(AM/FM ch1 – 40)	26.965 – 27.405 MHz	E1	ITALY/SPAIN/FRANCE
36CH	(AM/FM ch1 – 36)	26.855 – 27.265 MHz	I2	ITALY
80CH	(FM ch1 – 80)	26.565 – 27.405 MHz	DE	GERMANY
12CH	(AM ch4 – 15)	27.005 – 27.135 MHz		
40CH	(FM ch1 – 40)	26.965 – 27.405 MHz	D2	
12CH	(AM ch4 – 15)	27.005 – 27.135 MHz		
40CH	(FM ch1 – 40)	27.60125 – 27.99125 MHz	UK	UK FREQUENCIES
40CH	(FM ch1 – 40)	26.965 – 27.405 MHz		CEPT FREQUENCIES
40CH	(AM/FM ch1 – 40)	26.960 – 27.400 MHz	PL	POLAND
<b>CB / International Bands</b>				
450CH	(AM/FM ch1 – 450)	25.615 – 30.105 MHz	RU	RUSSIA
450CH	(AM/FM ch1 – 450)	25.610 – 30.100 MHz	PO	POLAND
43CH	(FM ch1 – 43)	26.830 – 27.405 MHz	C2	HOLLAND FISHING BOATS
120CH	(AM/FM ch1 – 120)	26.515 – 27.855 MHz	S	120 CHANNELS
120CH	(AM/FM ch1 – 120)	26.510 – 27.850 MHz	P2	POLAND 120 CHANNELS
<b>AMATEUR RADIO 10 Meter Band</b>				
		28.000 – 29.700 MHz	HR	AMATEUR RADIO

## Jumpers Setting

OTP 1	OTP 2	OTP 3	Detail	Country frequency											
				E1	I2	D E	D2	U K	PL	R U	P O	C2	S	P2	H R
0	0	0	<b>CB EU BANDS ONLY</b>	✓	✓	✓	✓	✓	✓	✗	✗	✗	✗	✗	✗
0	0	1	<b>CB EU BANDS + CB INTERNAT'L BANDS + HR HAM RADIO BAND</b>	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
0	1	1	Band Lock Option	Single country frequency select follows last setting.											
0	1	0	<b>RU BAND ONLY (450 CH)</b>	✓	✓	✓	✓	✓	✓	✓	✗	✗	✗	✗	✗
1	0	0	<b>PO BAND ONLY (450 CH)</b>	✓	✓	✓	✓	✓	✓	✗	✓	✗	✗	✗	✗
1	1	1	<b>HR HAM RADIO BAND ONLY</b>	✗	✗	✗	✗	✗	✗	✗	✗	✗	✗	✗	✓

\*1 Remark: "0" = short circuit      "1" = open circuit  
 \*2 Remark: ✓ = enabled                      ✗ = disabled

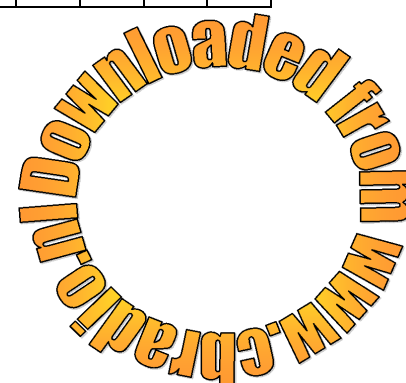

# Location of Jumpers

