



RE : CB Major from 80/12 to 40/40

As you know, there are four option of frequency band available in CB-Major. The frequency band is decided by two pcs of jumper wire in CB-Major main PCB(SEL1 and SEL2). The table below is the SEL1/SEL2 combination relevant to the difference bands :

	SEL1	SEL2
40FM	Insert/short	Insert/short
40FM/40AM	Insert/Short	open
80FM/12AM	Open	Insert/short
80FM/80AM	Open	Open

So, to change from 80FM/12AM to 40FM/40AM, you just need to short the SEL1 and open the SEL2.

For your convenience, enclosed you can find the SEL1 and SEL2 location in the main PCB.

