


## Midland M 10 (ITA)

- MODIFICA PER RENDERE OPERATIVI I 400 CANALI E ALTRE BANDE
- Aprire l'apparecchio togliendo il guscio metallico inferiore (quello con l'altoparlante);
- individuare i ponticelli LK801 e LK802 (fare riferimento alle foto sotto)

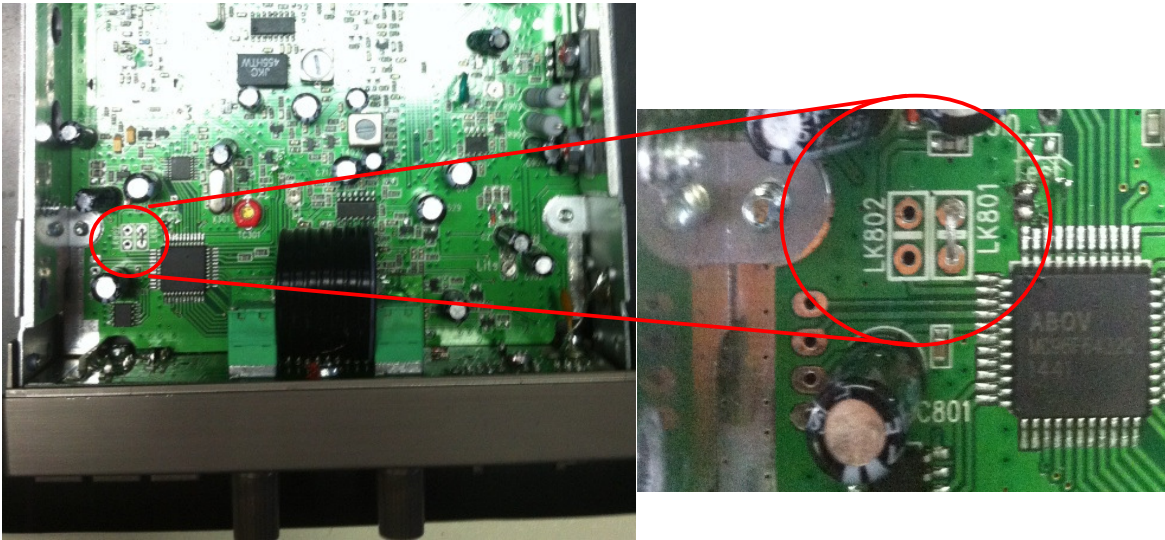


BAND	LK801	LK802
Selezione bande (Default)	APERTO	APERTO
Selezione bande Tutte	CHIUSO	APERTO
Banda PX	APERTO	CHIUSO
Banda RU	CHIUSO	CHIUSO

Per selezionare le bande:


- Spegner la radio;
- Accendere l'apparecchio premendo contemporaneamente i tasti 'SU' e 'GIU'
- Selezionare la banda desiderata con 'SU' e 'GIU'
- Premere il PTT per confermare la selezione

- PER PORTARE POTENZA DI TRASMISSIONE A 10W:  
Tagliare il ponticello LK501 (fare riferimento alle foto sotto)

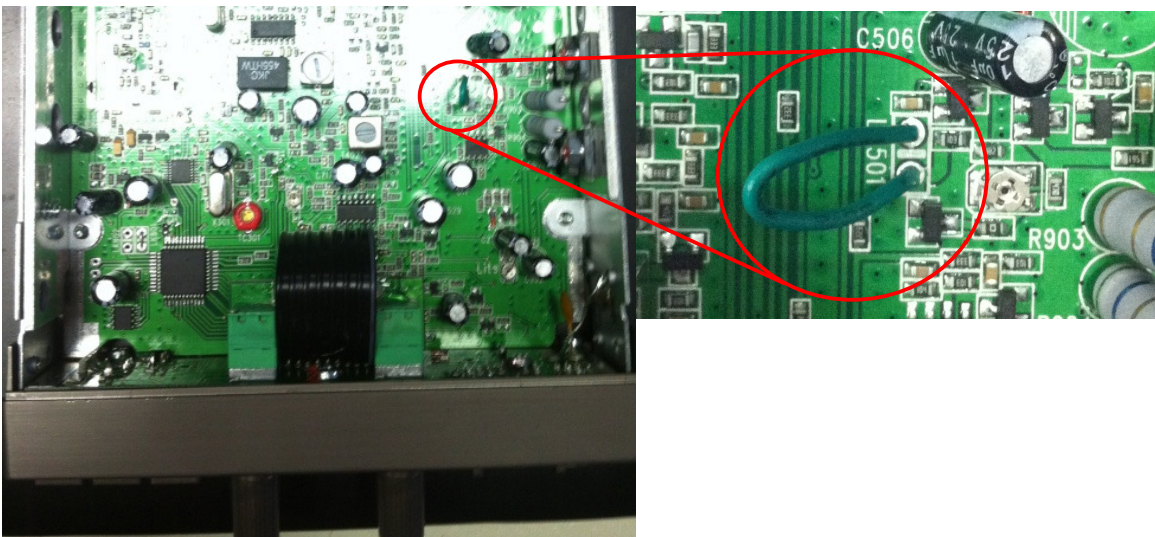

## Midland M 10 (ENG)

- MODIFY TO UNLOCK 400 CH AND OTHER BANDS
  - Open the unit and remove the lower case (speaker side)
  - Find the LK801 and LK802 jumper (see photo below)

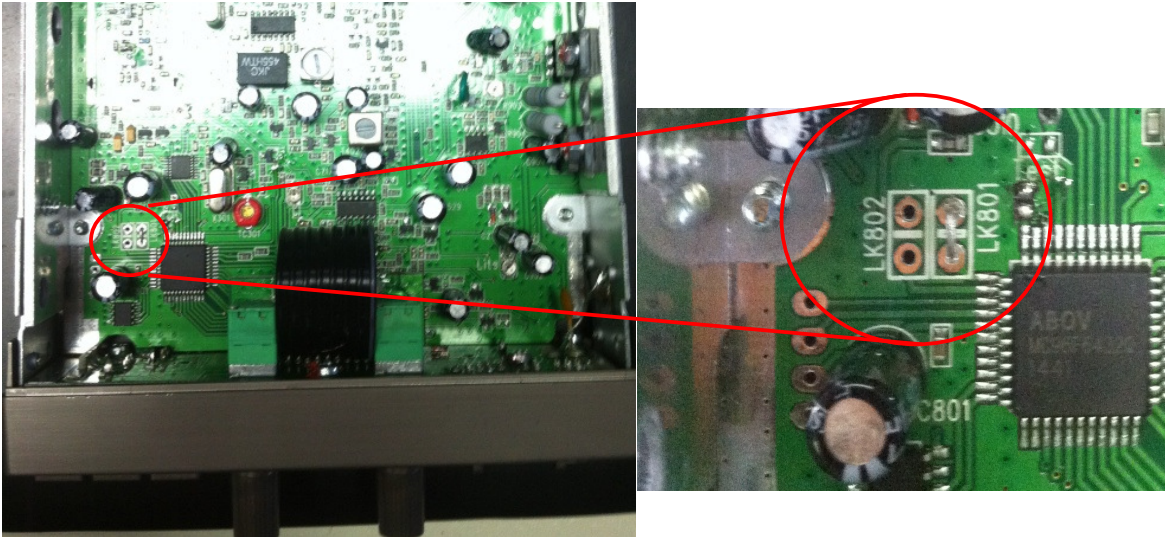

BAND	LK801	LK802
Band Selection (Default)	OPEN	OPEN
Band Selection: All	CLOSE	OPEN
PX Band	OPEN	CLOSE
RU Band	CLOSE	CLOSE

### Band Selection:

- turn off the unit
- turn ON the unit while keeping pressed 'UP' and 'DOWN' buttons together
- Select the band with 'UP'/'DOWN' button
- Press PTT to confirm your selection

- 10W POWER TX MODIFY:  
Open the LK501 jumper (see photo below)

