


**CRT SS 7900 freq expand operation /
extension de fréquence**

OP1=0(OP1 grounding) Freq Range:25.615-30.105MHz

Channel No.	Freq Range	Freq Nam	CD show	Remark
40CH	25.615-26.005MHz	A	A	Default
40CH	26.065-26.505MHz	B	B	
40CH	26.515-26.955MHz	C	C	
40CH	26.965-27.405MHz	D	D	CB
40CH	27.415-27.855MHz	E	E	
40CH	27.865-28.305MHz	F	F	
40CH	28.315-28.755MHz	G	G	
40CH	28.765-29.205MHz	H	H	
40CH	29.215-29.655MHz	I	I	
40CH	29.665-30.105MHz	L	L	

Expand Way

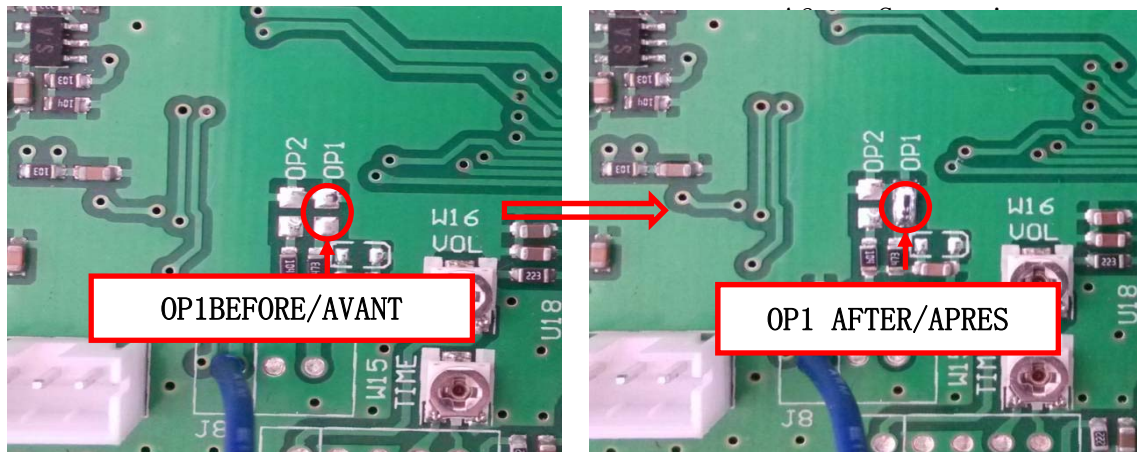

OUT OF BOX	28.000 - 29.6950 MHz		40W FM	15W AM	40W SSB
AFTER MODIFICAT	25.615 - 30.1050 MHz		35W FM	12W AM	35W SSB

FREQUENCIES OUT OF BOX	
Band A	28.0000 - 28.1950 MHz
Band B	28.2000 - 28.3950 MHz
Band C	28.4000 - 28.5950 MHz
Band D	28.6000 - 28.7950 MHz
Band E	28.8000 - 28.9950 MHz
Band F	29.0000 - 29.1950 MHz
Band G	29.2000 - 29.3950 MHz
Band H	29.4000 - 29.5900 MHz
Band I	29.6000 - 29.6950 MHz

